

SVS PROJECTOR LIFT SHOW MICROSWITCH INFORMATION

POSITIONING:

Using the Key Switch Controller, lower the lift (with Key Switch in **Service** position) to where your **Show** position. The **Show** microswitch is adjusted by loosening the thumb screw on the **Show** microswitch bracket, located on the lift's top frame. Position the bracket along the roller guide so that the microswitch touches the large retainer washer. You should be able to see or hear the microswitch on the bracket compress and make contact. Make sure the microswitch is not positioned too close to the washer because the washer must pass under the microswitch when going to the **Service** position.

OPERATION OF SHOW POSITION:

The key switch controller operation for the **Show** position operates by switching the key switch to **Show** and pressing the toggle switch down. When the lift reaches the **Show** microswitch, it will stop.

To lower to the **Service** position, switch the key switch to the **Service** position and press the toggle switch down. The lift will lower to its maximum drop length, until the down limit microswitch stops the motor.

Pressing the toggle switch up works in both the **Service** and **Show** position on the key switch. The lift will not stop at the **Show** position when using pressing the toggle switch up.

