

LIMIT SWITCH OPERATION:

NO = NORMALLY OPEN SWITCH TERMINAL, CONNECTS TO COMMON TERMINAL WHEN SWITCH LEVER IS DEPRESSED

NC = NORMALLY CLOSED SWITCH TERMINAL, CONNECTS TO THE COMMON TERMINAL UNTIL THE SWITCH LEVER IS DEPRESSED.

SVS MINI 4 STANDARD WIRING (110VAC)

(FOR SVS MINI 4 SERIES LIFTS)

[NOT TO BE USED WITH LIFT WITH POWER SENSOR, 12V TRIGGER, OR EXTRA SHOW POSITION ACCESSORIES]

